



BEST
SIM
RIG.

Dynamic frame

BSRig design

Assembly instructions



*Visible electronic parts and the chair
are not included in the set.

WARNING



- **Do not use power tools** for assembly, as over-tightening may damage the frame.
- Plan and build the stand on a flat surface.
- Do not force parts together.
- Ensure everything is tightly screwed before adding additional fittings.












If you need support with your product, please contact our team at: help@bsrig.com




Small parts are not suitable for children under 3 years old or for individuals who tend to put non-edible objects in their mouths.



IN THE BOX

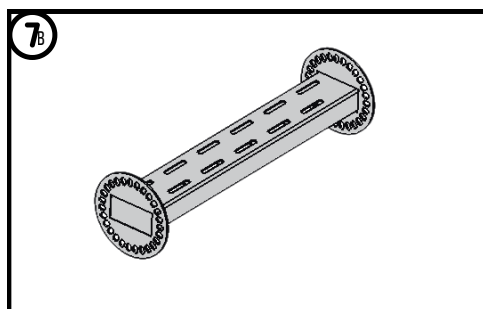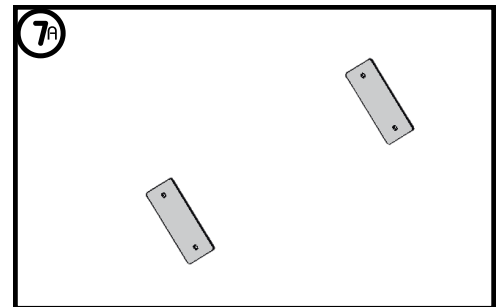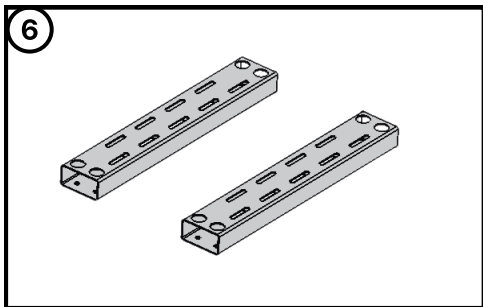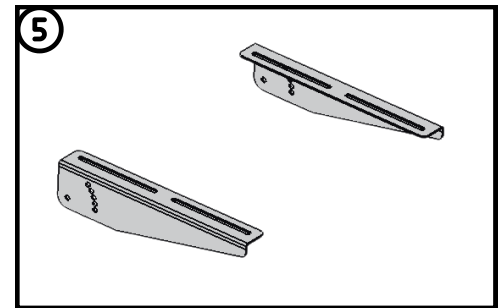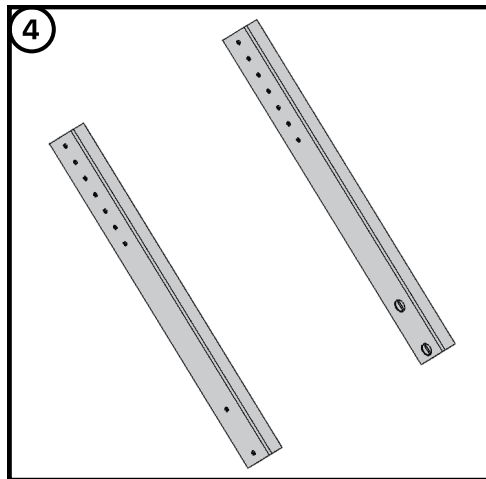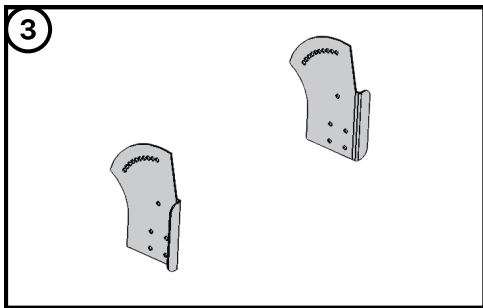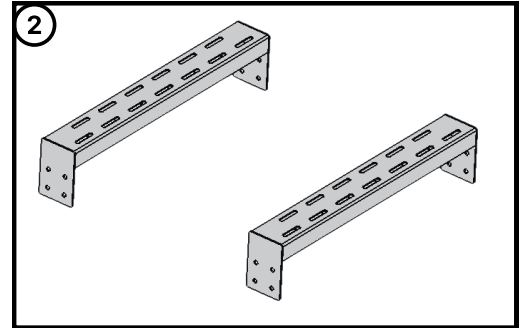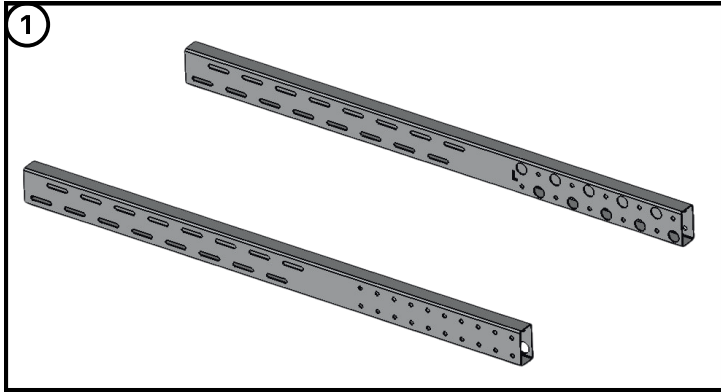

Bolts
M8x60 - 20 pcs




Bolts
M8x20 - 8 pcs



Nut
M8 - 28 pcs




Washer
M8 - 56 pcs

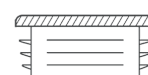

Cap - 10 pcs

01

Place parts 1 on a flat and even surface parallel to each other, with markings P and L facing inward.

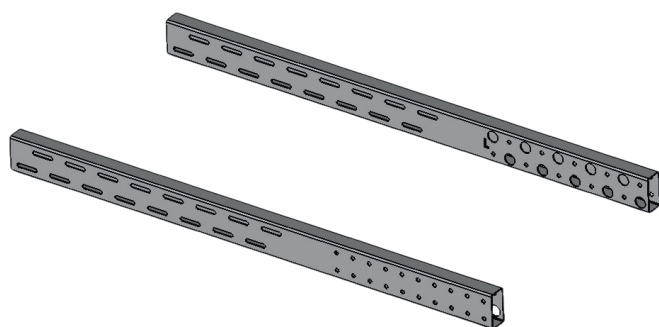


In this step you need:

- part 1

02

Attach parts 2 to parts 1 using the screws, washers, and nuts listed below.

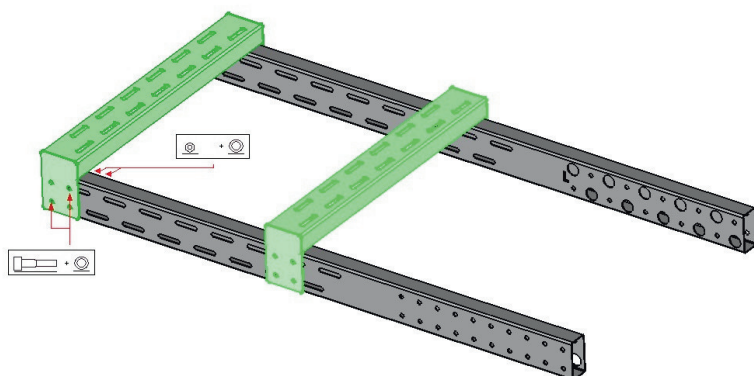

Repeat on
other side

In this step you need:

- part 1
- parts 2
- Bolt M8x60 - 8 pcs
- Washer M8 - 16 pcs
- Nut M8 - 8 pcs

WARNING




Risk of finger pinching; Tighten parallel parts evenly and with the same force;;

Remember that the parts shown on this page can be adjusted according to individual needs.

03

Attach items 3 using the bolts, washers and nuts listed below. On the inside, the washer and nut should be in the large hole.

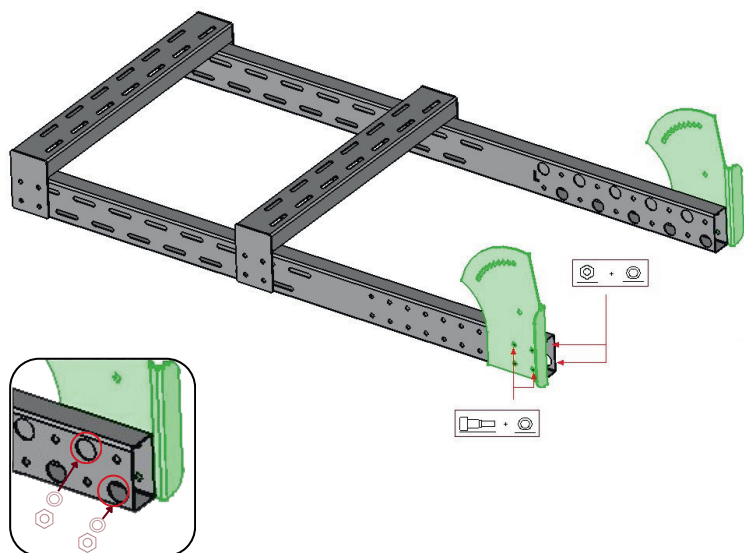


Repeat on
other side

In this step you need:

- parts from step 2
- parts 3
- Bolt M8x20 - 4 pcs
- Washer M8 - 8 pcs
- Nut M8 - 4 pcs

04

Attach parts 4 using the screws, washers, and nuts listed below.

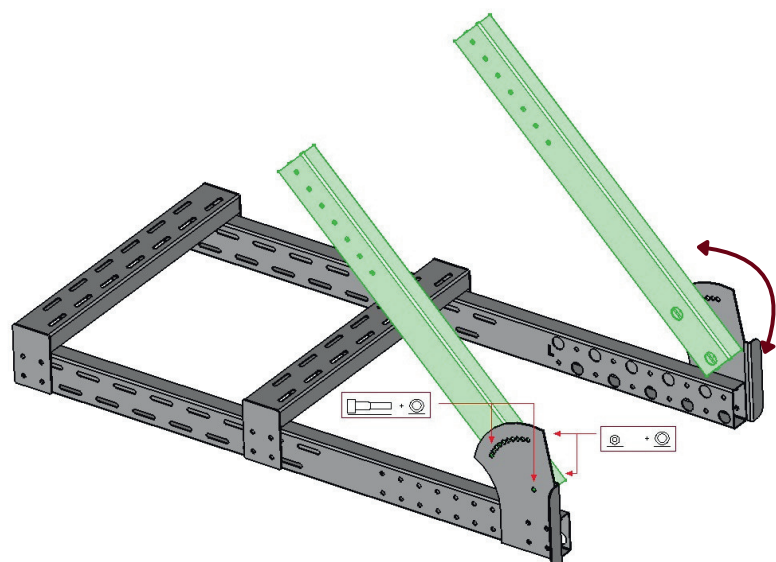

Repeat on
other side

In this step you need:

- parts from step 3
- parts 4
- Bolt M8x20 - 4 pcs
- Washer M8 - 8 pcs
- Nut M8 - 4 pcs

WARNING




Risk of finger pinching; Tighten parallel parts evenly and with the same force;.

Remember that the parts shown on this page can be adjusted according to individual needs.

05

Attach parts 5 using the screws, washers, and nuts listed below.

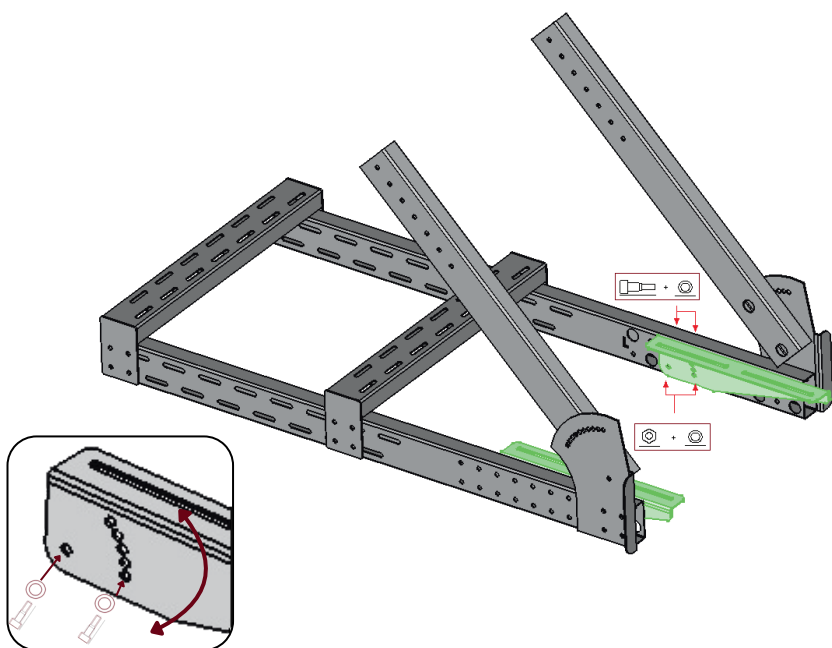
Repeat on
other side

In this step you need:

- parts from step 4
- parts 5
- Bolt M8x60 - 4 pcs
- Washer M8 - 8 pcs
- Nut M8 - 4 pcs

06

Attach parts 6 using the screws, washers, and nuts listed below.

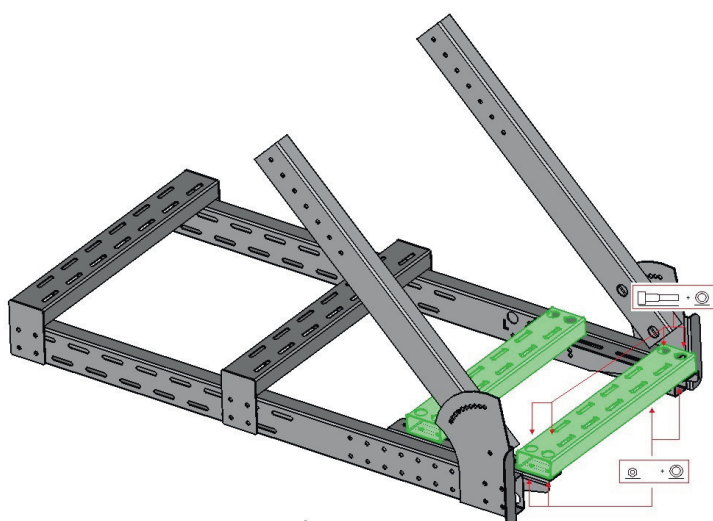Repeat on
other side

In this step you need:

- parts from step 5
- parts 6
- Bolt M8x60 - 4 szt
- Washer M8 - 8 szt
- Nut M8 - 4 szt

WARNING




Risk of finger pinching; Tighten parallel parts evenly and with the same force;;

Remember that the parts shown on this page can be adjusted according to individual needs.


07

Attach parts 7a and 7b using the screws, washers, and nuts listed below.

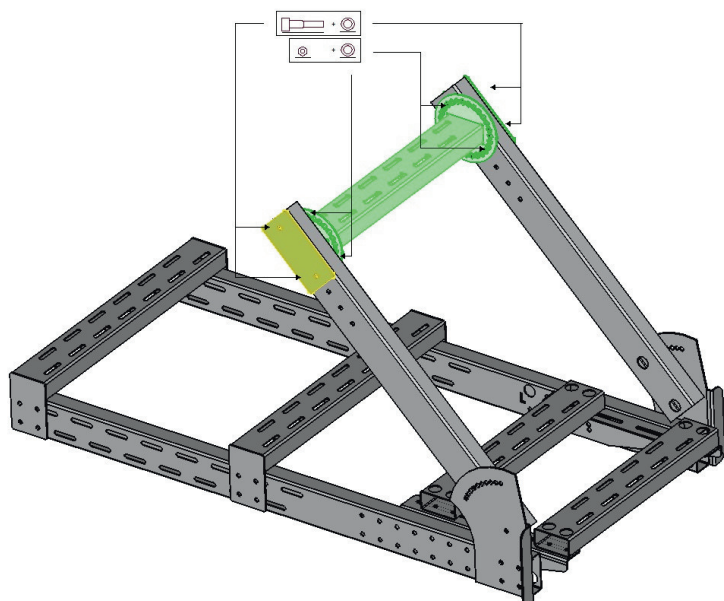

In this step you need:

- parts from step 6

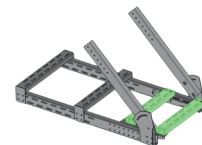

- parts 7a and 7b



- Bolt M8x60 - 4 szt



- Washer M8 - 8 szt




- Nut M8 - 4 szt



08

Place the caps in the marked locations.

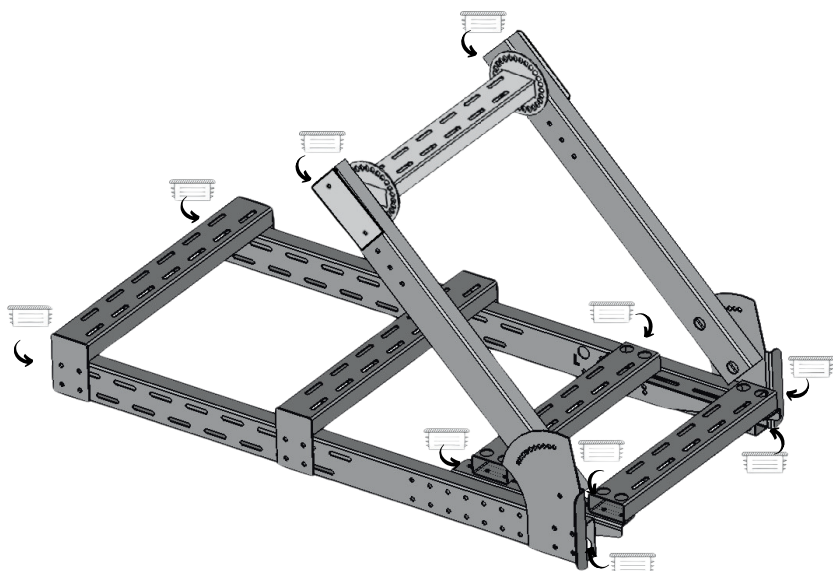

In this step you need:

- parts from step 7



- caps - 10 pcs




WARNING



Risk of finger pinching; Tighten parallel parts evenly and with the same force;;

Remember that the parts shown on this page can be adjusted according to individual needs.

360° degree steering wheel angle adjustment.
Possibility of mounting a **rim like in a truck.**

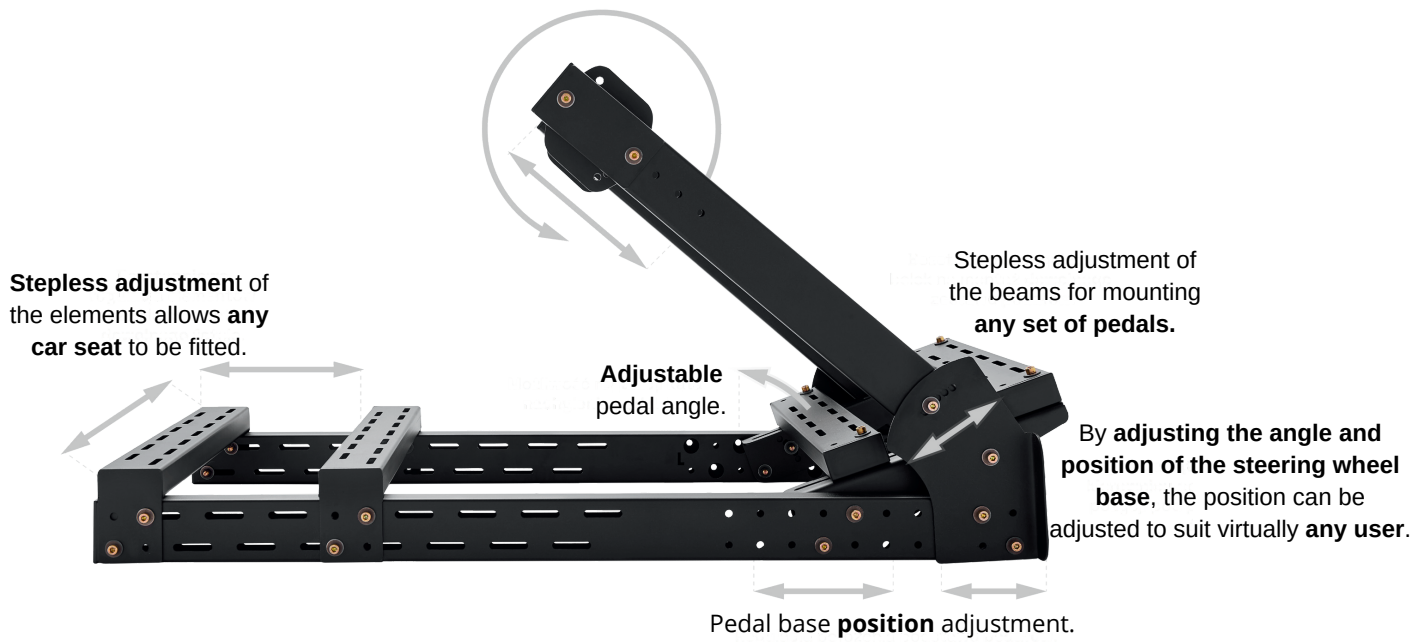

If you need support with your product, please contact our team at: help@bsrig.com